
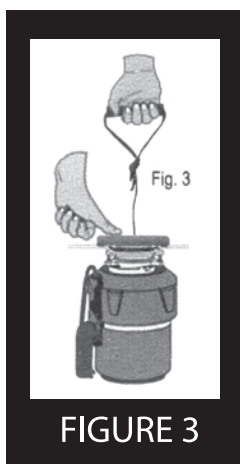
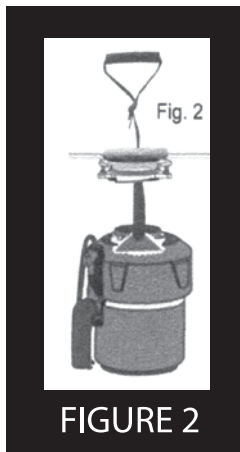


Product Name: Lift-n-Lock Garbage Disposal Installation Tool  
Product #: 4866

**CAUTION:** Lift-n-Lock is designed to support 3.5" inlet garbage disposers only

## INSTALLING A GARBAGE DISPOSER USING "LIFT-N-LOCK"

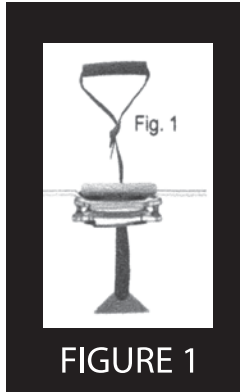

- 1 Following manufacturer's instructions & safety precautions remove old garbage disposer, disposer flange assembly and putty from sink.
- 2 Following manufacturer's instructions & safety precautions make all necessary electrical connections, knock out dishwasher drain plug (if required) and mount discharge tube on unit to be installed.
- 3 Following manufacturer's instructions mount the new unit's flange assembly onto kitchen sink.
- 4 Depress buckle lever on Lift-N-Lock and slide buckle assembly towards handle end. Feed triangle end of strap through flange until buckle assembly straddles sink mounted flange as shown in Fig 1.
- 5 Position new garbage disposer under sink and feed triangle end into disposer cavity, adjusting strap length if necessary.
- 6 Ensure that triangle end is suspended in center of disposer cavity as shown in cut-away of Fig. 2.
- 7 While depressing buckle lever firmly, pull handle on strap vertically until disposer contacts flange assembly, then release buckle lever to secure disposer in place as shown in Fig. 3.
- 8 Following manufacturer's instructions attach disposer to flange, and make all necessary plumbing connections.
- 9 Depress buckle lever and slide buckle assembly to slacken strap. Retrieve triangle end from disposer cavity with long nose pliers
- 10 Test garbage disposer and check for leaks.