


6. How to use the LynCar Vinyl Shower Pan Liner for a large area

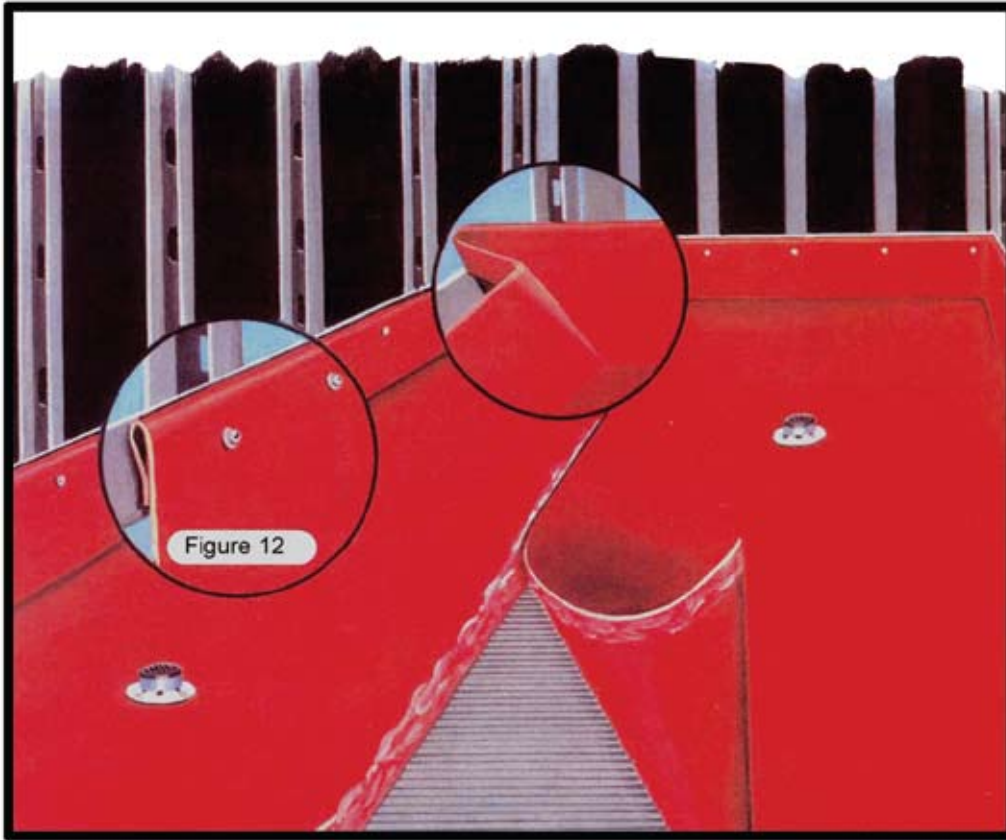

Shower areas with multiple shower heads and drains are commonly referred to as "Gang Showers". These shower areas are found in schools, dormitories, sports facilities and commercial installations.

Read the previous instructions in this brochure and pay attention to the corner, drain and seaming details, **(see Figures 1 through 11)**. When large areas must be covered, **LynCar Vinyl Shower Pan Liner** can be easily joined. Sections of the liner can be joined as they are laid. Lay sections to be joined, side by side and follow the above instructions for joining, **(see Figures 9 through 11)** If metal studs are present, proceed as follows.

The shower pan material must be attached at the height of at least 3 inches above the highest flood level of the shower area. Determine this height and attach a metal furring strip at this level around the entire shower stall area.

Measure the shower area, determine the amount of material required and also determine where seams will be required. To attach a shower pan material to the metal furring strip, fold the material as indicated above.

Use a small diameter, short length, self tapping sheet metal screw with a small washer to fasten the material to the metal furring strip. Space screws at a distance which will prevent the material from sagging.

Finish the drain installation as described in **Figure 7** and perform appropriate water test as described in the installation section.